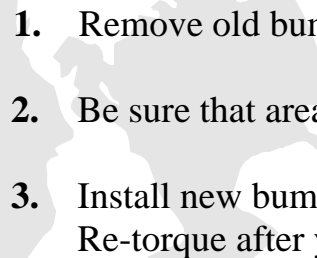


.....
Warrior, Inc.

CJ & YJ REAR BUMPER
INSTALLATION INSTRUCTIONS
WAR 515, 515C
50510, 50510C, 51510, 51510C

Bumpers are designed to fit over existing rear cross member support.

- 
1. Remove old bumperetts from vehicle.
 2. Be sure that area where bumper will be mounted is flat and free of any damage.
 3. Install new bumper with enclosed hardware. Tighten 7/16” nuts to 50ft / lbs. Re-torque after your initial test drive.

THANK YOU FOR PURCHASING WARRIOR PRODUCTS

.....
“Your Knight in Shining Armor!”