

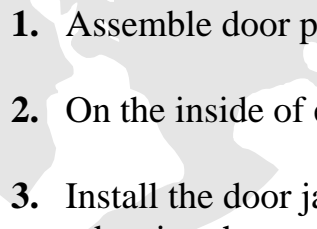
.....

Warrior Products, Inc.

ALUMINUM HALF DOORS **INSTALLATION INSTRUCTIONS** **WAR 902DOOR CJ 5'S 1955 to 1975** **WAR 905DOOR CJ 5'S 1976 to 1985**

Read all instructions before proceeding.

NOTE: COMES WITH PADDLE HANDLE ASSEMBLY

- 
1. Assemble door paddle handle, both sides, with bolt & nuts supplied
 2. On the inside of each door, install foam molding per diagram "A".
 3. Install the door jam hinges (902Door only), on which the door will hang, on the body tub using the screws provided. (Note: 905 Door uses existing hinges)
 4. Install upper and lower hinge on inside of door opening using the door to mark the spots where you will need to drill your holes. Use a 1/8" drill bit. Mount all 4 hinges.
 5. Hang door on jeep and check for proper fit.
 6. Adjust striker assembly on top of tub so door paddle centers on the striker. Mark and drill two 3/8" holes and mount the bracket on the tub making sure that the alignment is correct. The door should open and close smoothly if properly installed.

Enjoy your new Warrior half doors!

.....

"Your Knight in Shining Armor!"