

•
•
•
•
•
•
•

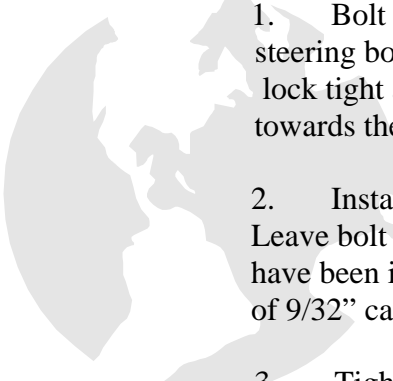
Warrior Products, Inc.

STEERING BOX BRACE

INSTALLATION INSTRUCTIONS

WAR 893

Your new steering box brace bolts between steering box neck, next to the Pitman Arm and the opposite side frame rail.

- 
1. Bolt the flat plate with 4 holes, provided with kit, to the bottom of the steering box, above the Pitman Arm. The new bolts provided must have lock tight applied to the threads. This is mandatory. The “U” opening faces towards the drivers side. Tighten all four bolts.
 2. Install complete cross bar using the four (4) self tapping screws to the frame. Leave bolt on steering box tube loose at steering box until the 4 self tapping screws have been installed. The screws can self drill or, for ease of installation, a pilot hole of 9/32” can be drilled.
 3. Tighten all bolts. Caution: do not over tighten self tapping screws.
 4. After a test drive, verify that all bolts are tight.

WARRIOR PRODUCTS Inc.

11100 SW INDUSTRIAL WAY
TUALATIN OREGON 97062
(503) 691-8915

“Your Knight in Shining Armor!” • • • • •