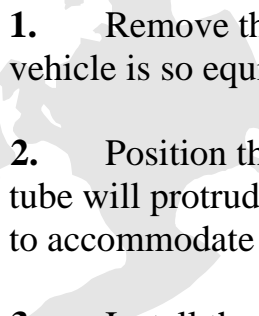


.....

Warrior Products, Inc.

FRONT RECEIVER **For Chevrolet Trucks** **INSTALLATION INSTRUCTIONS** **WAR 2063**

NOTE: Please read all instructions before starting installation of the receiver. Modifications may be required due to variations that exist between certain model years.

- 
1. Remove the front tow hooks from the underside of the vehicle frame if your vehicle is so equipped. Save the bolts for later use.
 2. Position the receiver under the vehicle frame to determine where the receiver tube will protrude through the air dam and cut a hole approximately 2 5/8" X 2 5/8" to accommodate the tube.
 3. Install the receiver to the frame using the supplied bolts if the vehicle was not equipped with factory tow hooks. If the vehicle has factory tow hooks they can be reinstalled using the factory fasteners and nut plate. Torque all fasteners to 40 ft/lbs.

ENJOY YOUR NEW RECEIVER!

.....

“Your Knight in Shining Armor!”